







Thule Rapid System Kit 1165

> Instructions

TOYOTA Estima, 5-dr MPV, 00-02, 03-05

TOYOTA Previa, 5-dr MPV, 00-02, 03-

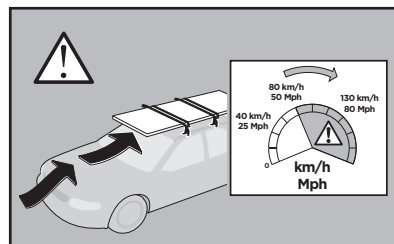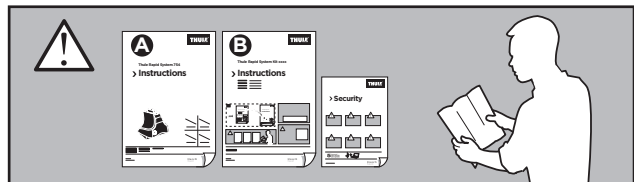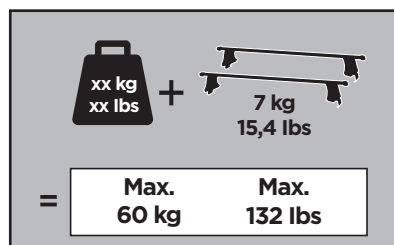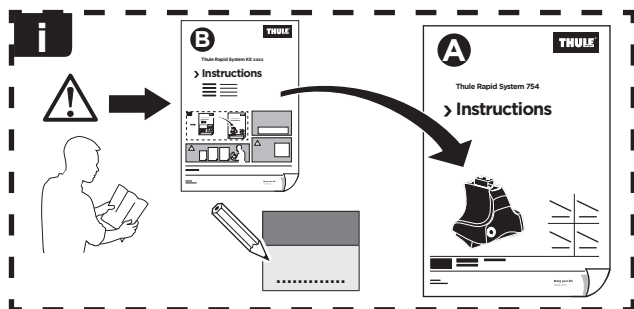

ISO 11154-E


141165

C.20130704
519-1165-02



Bring your life
thule.com



46 x4



283 x4



x1



x4

50029



x4

30148



x1




30113



x1

1

	X (scale)	X (mm)	X (inch)
TOYOTA Estima, 5-dr MPV, 00-02, 03-05	34	991	39
TOYOTA Previa, 5-dr MPV, 00-02, 03-	34	991	39

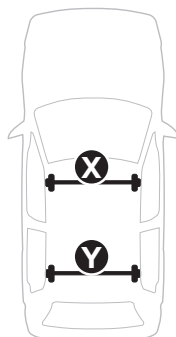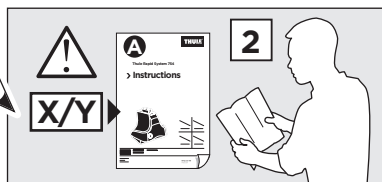
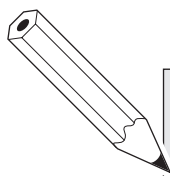


	Y (scale)	Y (mm)	Y (inch)
TOYOTA Estima, 5-dr MPV, 00-02, 03-05	31	961	37 ⁷/₈
TOYOTA Previa, 5-dr MPV, 00-02, 03-	31	961	37 ⁷/₈

2

TOYOTA Estima, 5-dr MPV, 00-02, 03-05s

TOYOTA Previa, 5-dr MPV, 00-02, 03-

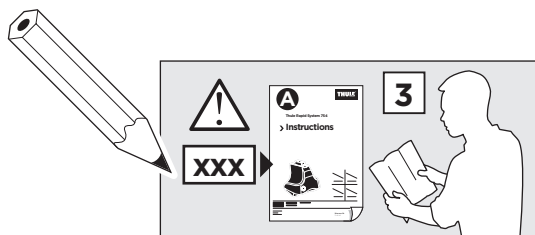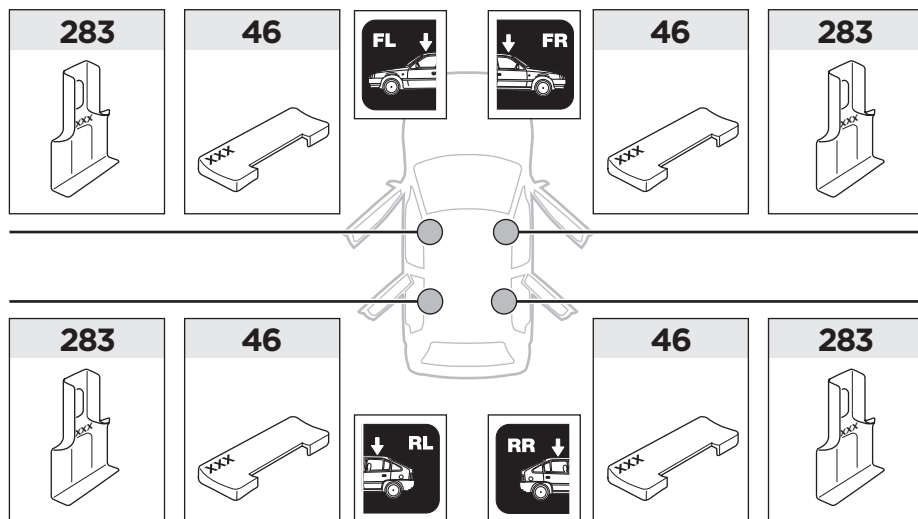

3

